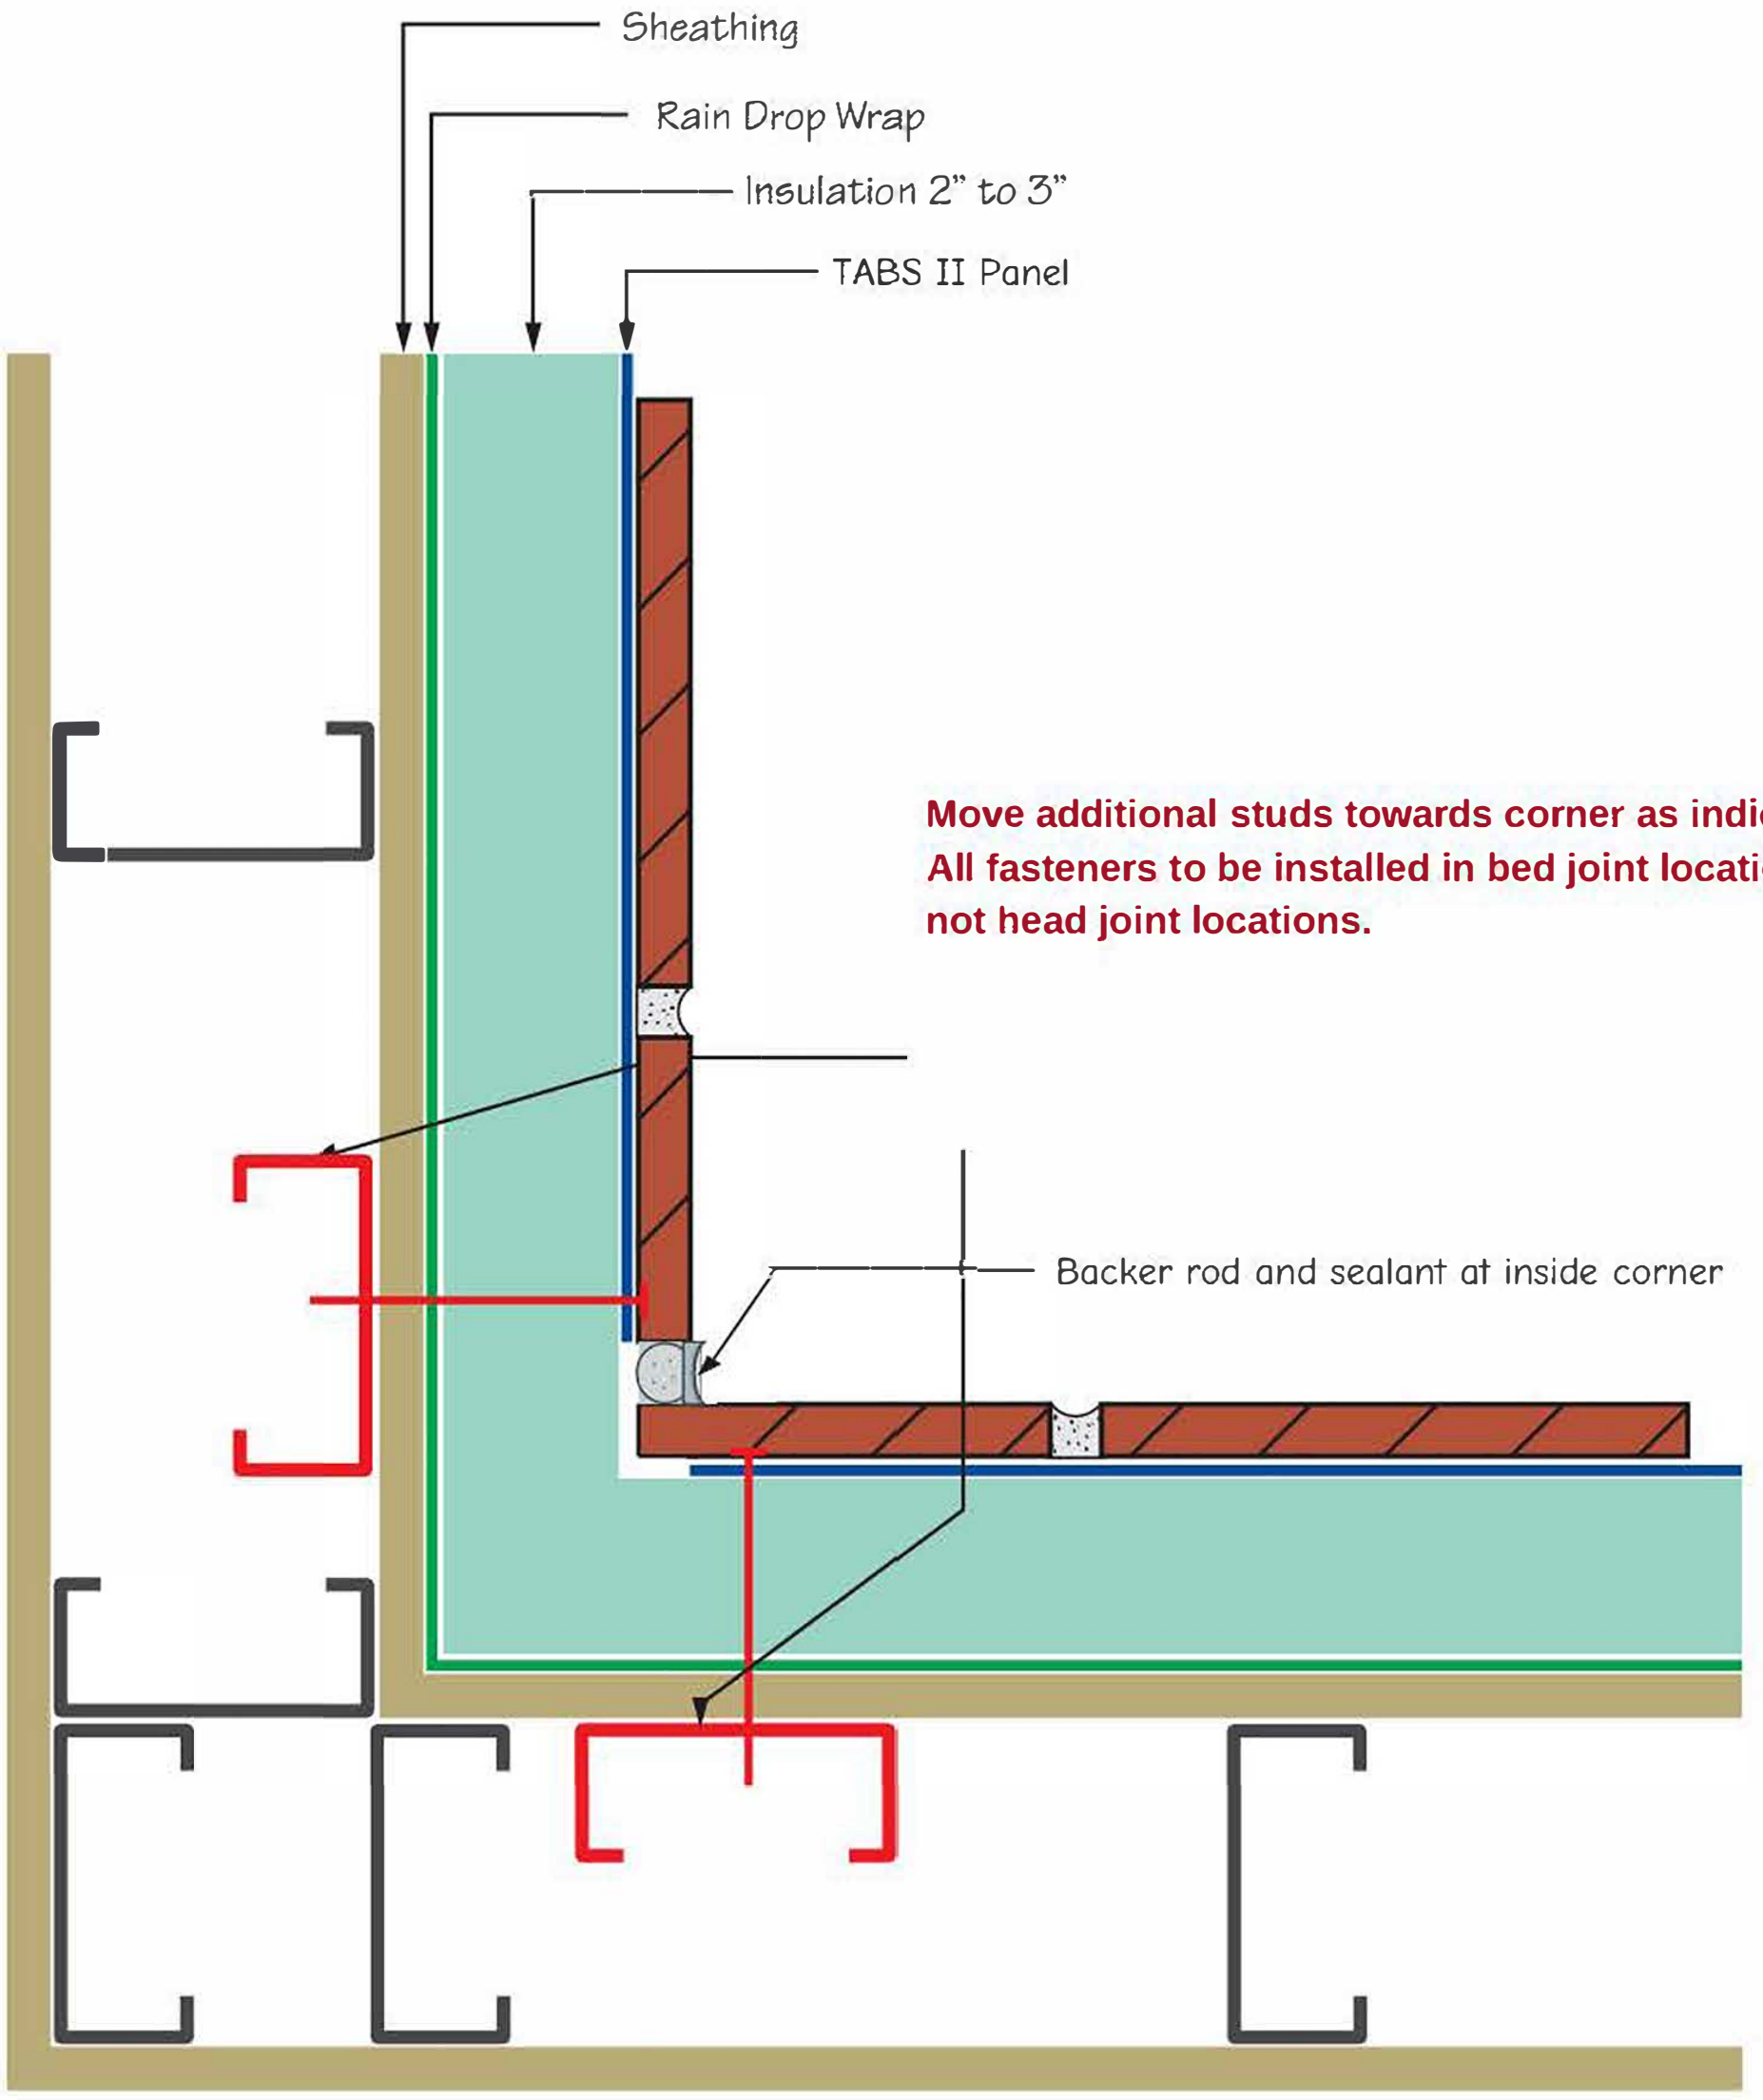


Move additional studs towards corner as indicated.
All fasteners to be installed in bed joint locations, not head joint locations.

TABS™

TABS TI Inside Corner Detail over 2" to 3" Insulation

Revised Oct. 28 2026