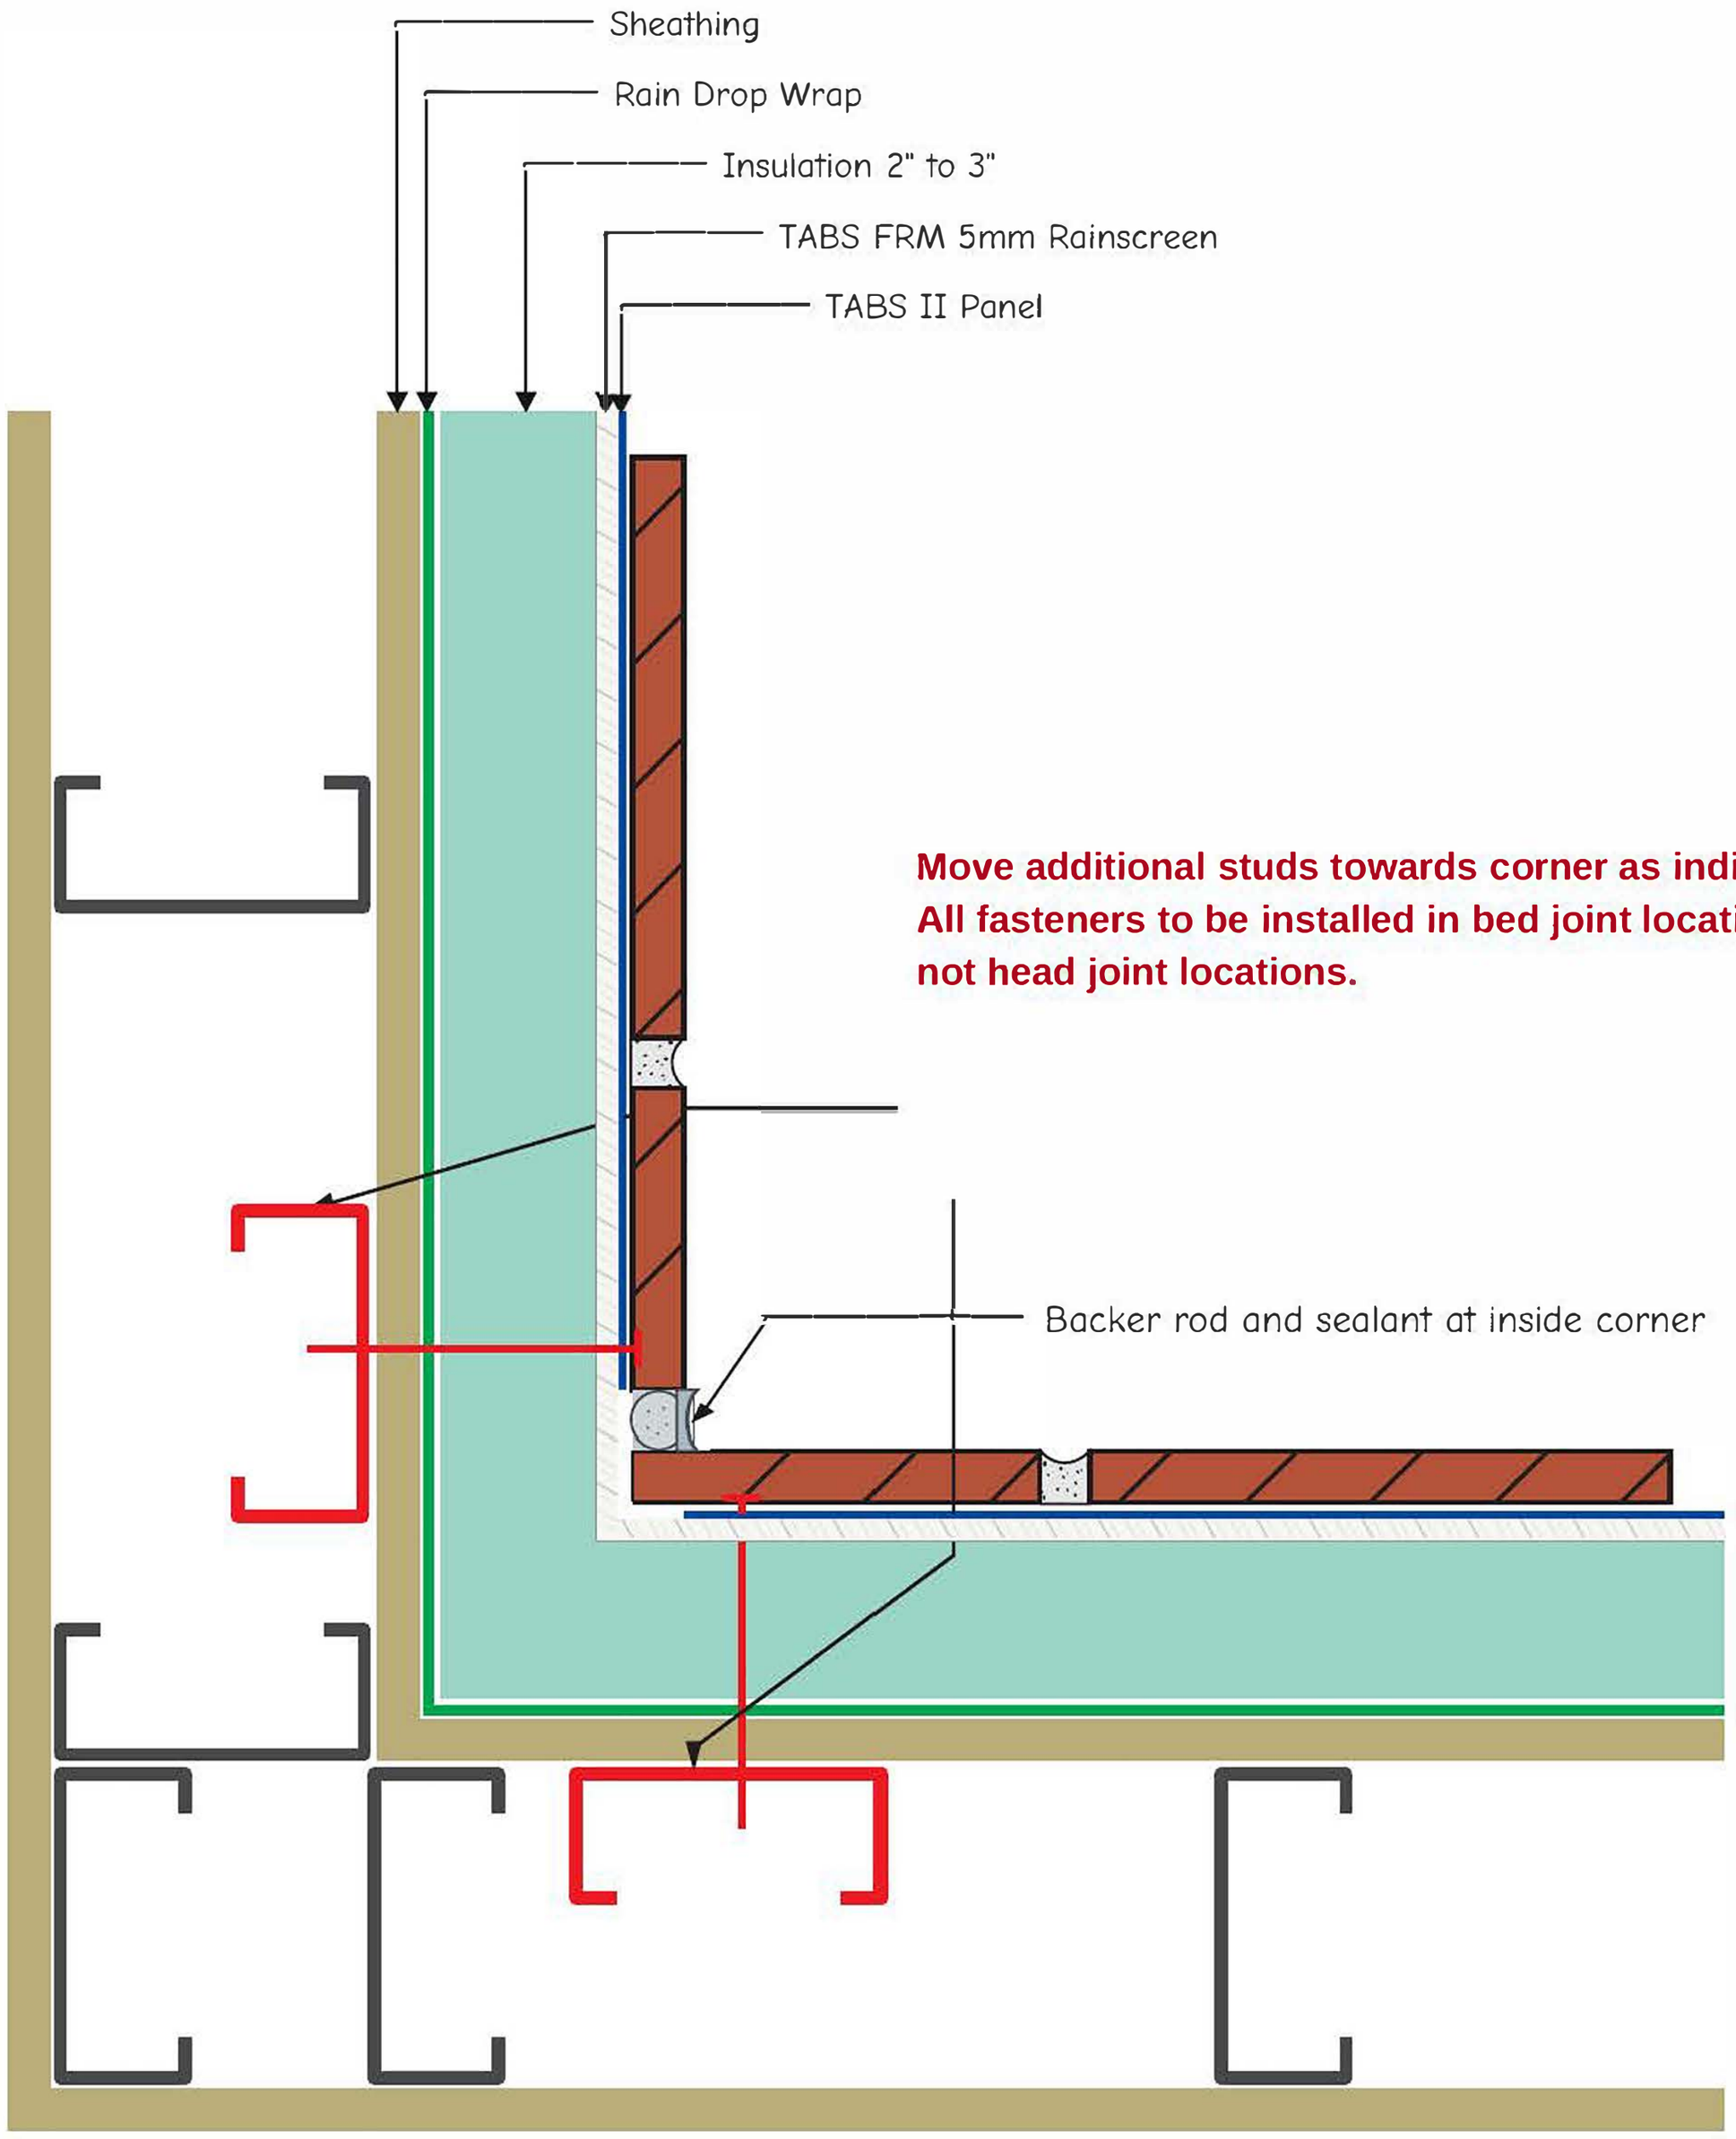


Move additional studs towards corner as indicated.
All fasteners to be installed in bed joint locations, not head joint locations.

TABS TI PLUS Inside Corner Detail over 2" to 3" Insulation

Revised Oct.28th 2026